



mcr OSO THERM. Instrukcja montażu okna otwieralnego z nieotwieralnym/Installation instructions for connecting an openable window with a fixed one

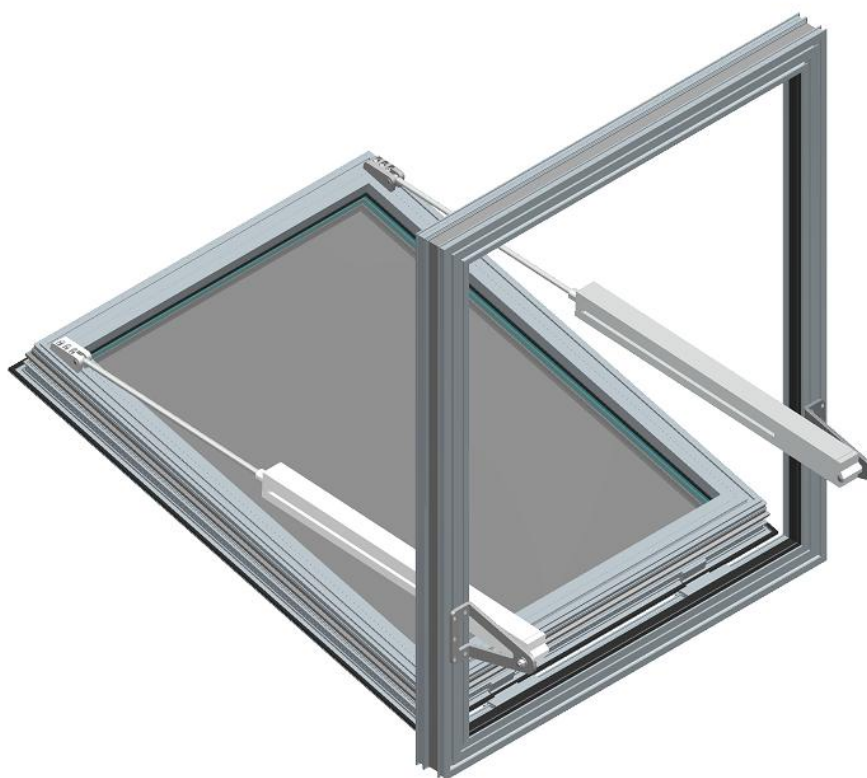


Installation in the wall

0. View of installed windows.


[cm]

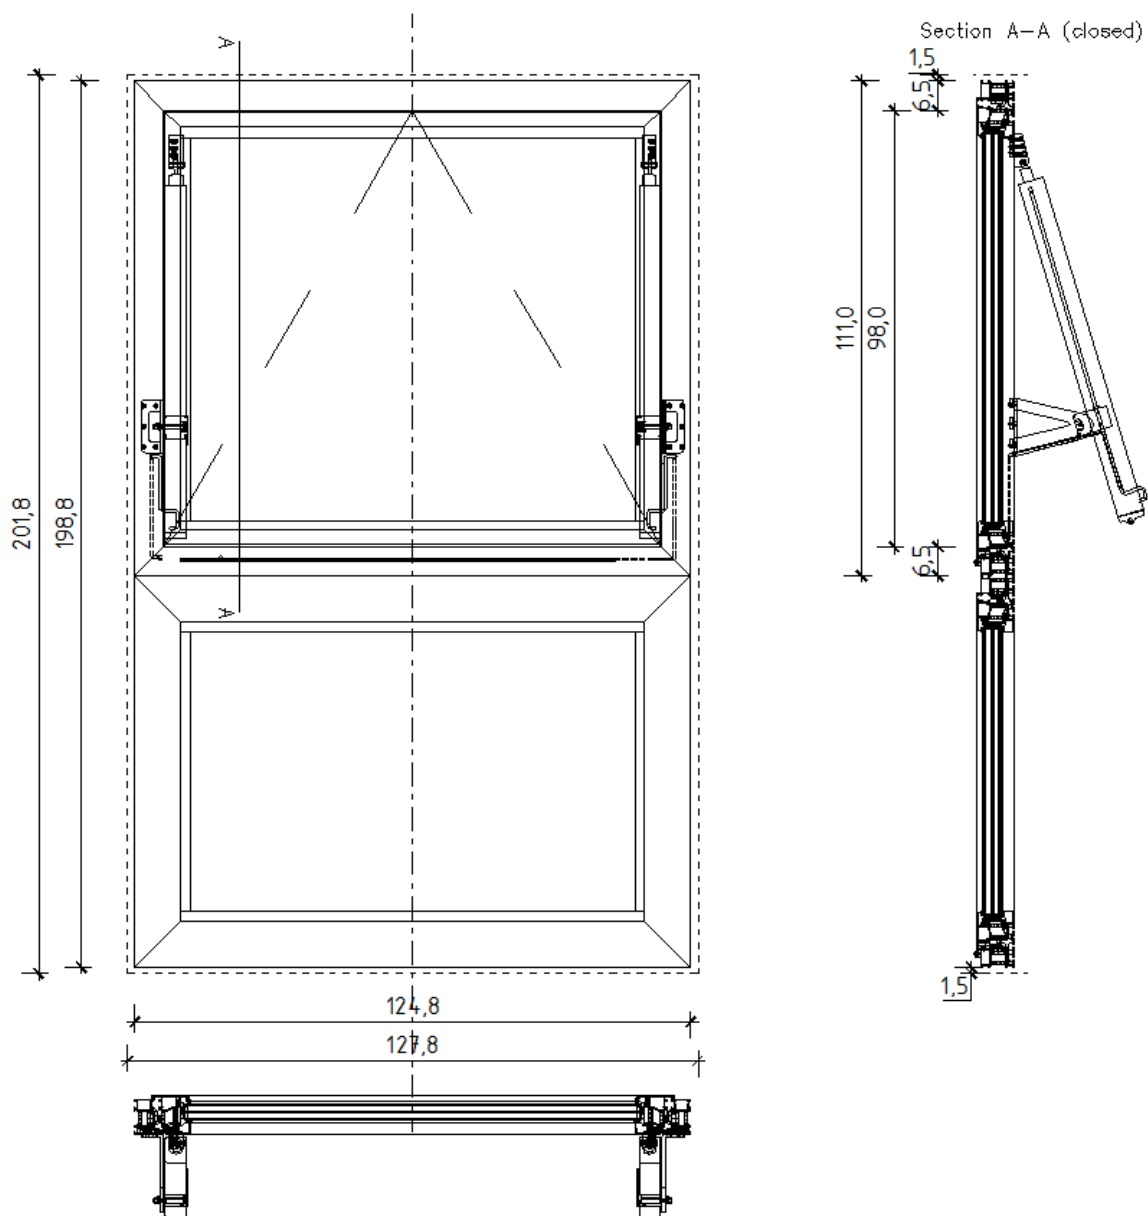

1. Windows are delivered as two separate windows.

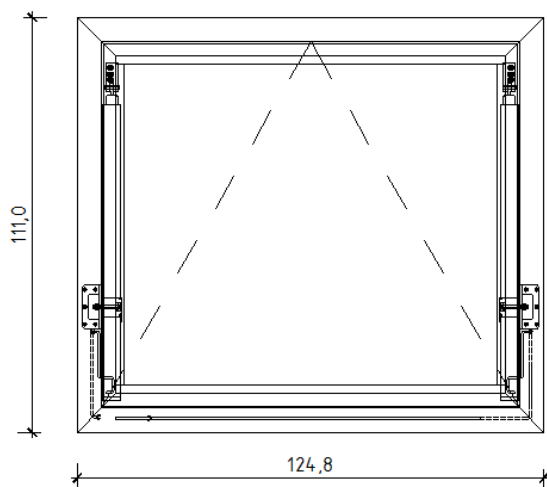

Smoke and heat exhaust window with spindle actuators.


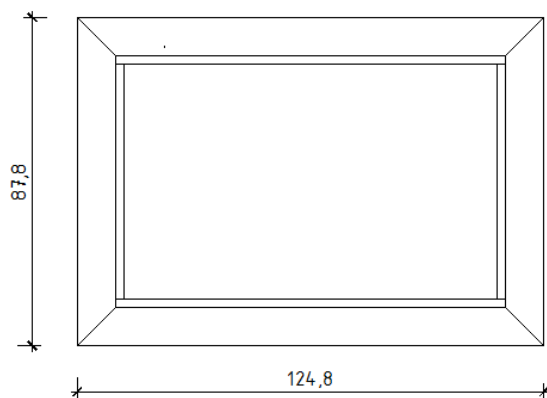


Permanent window.


2. Connecting windows.

At the beginning the glass must be removed from the permanent window.

Glazing beads (with gaskets) must be removed first. Then the glass package.

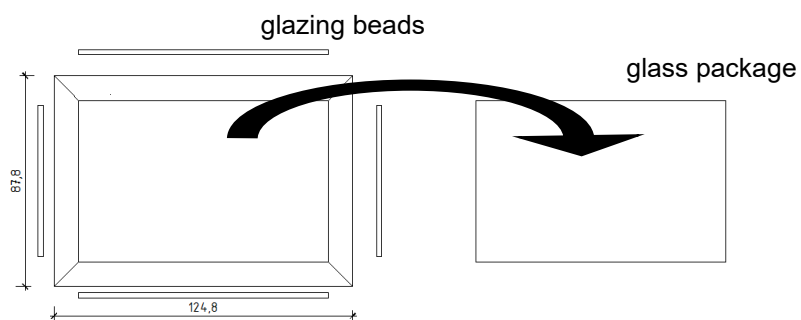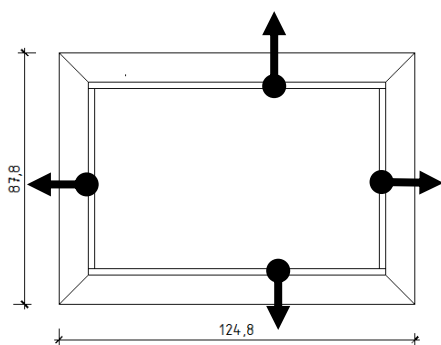


3. Connecting windows

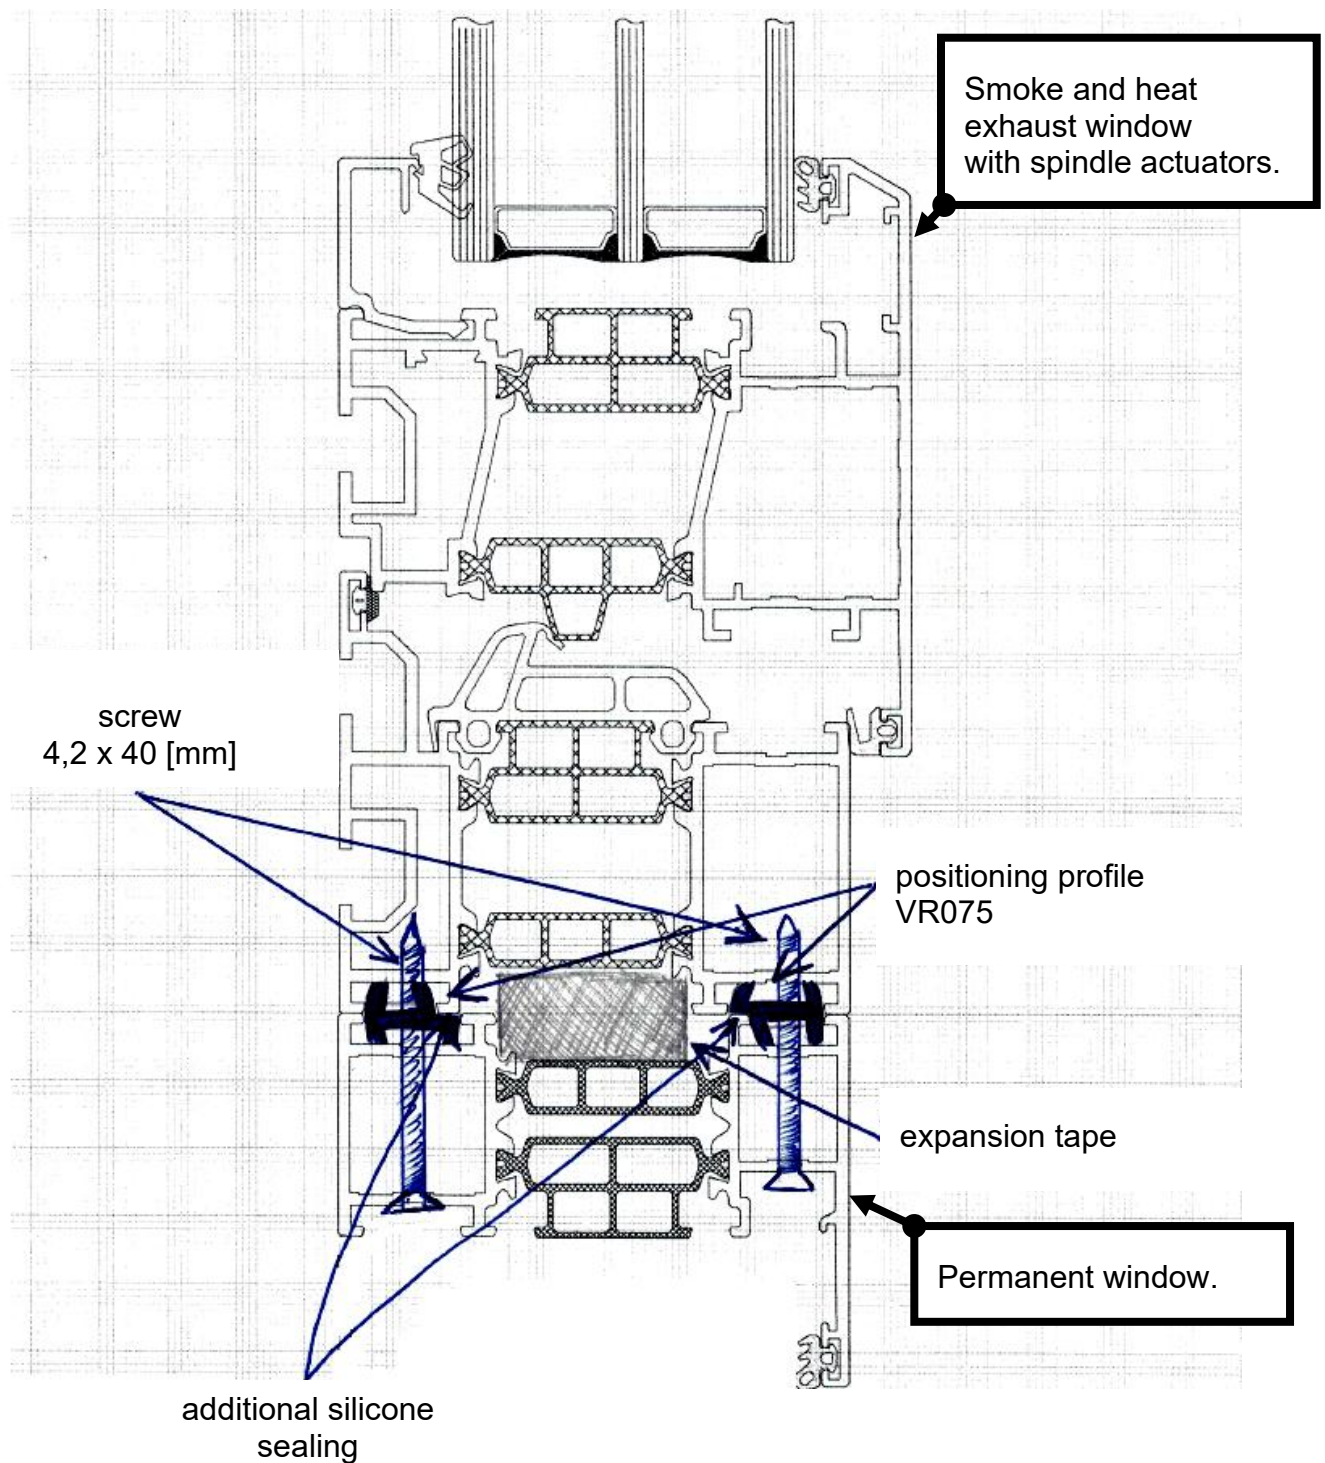



Connected windows are ready to be installed in the wall. Install them without the glass in the permanent window (because of the less weight).

4. Installation in the wall.

Install anchors to the window's frame.

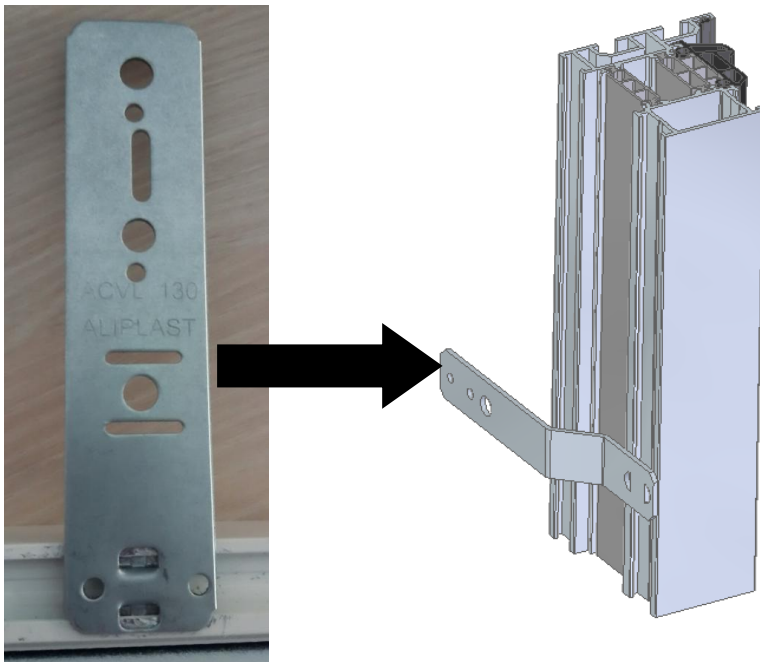


Required number of fixing points and example of fixing. All dimensions in mm.

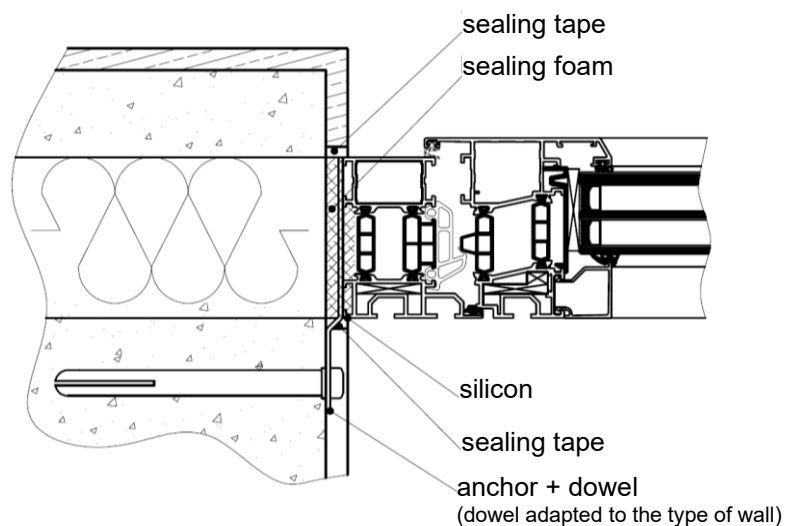
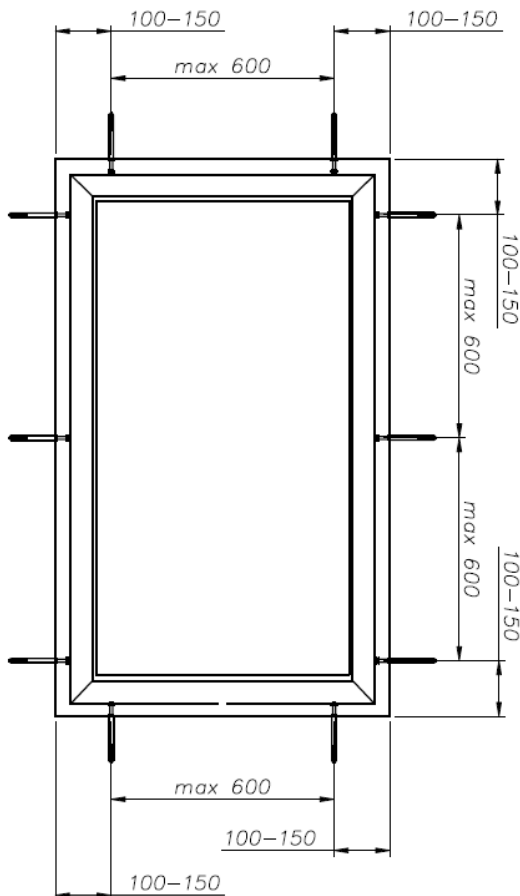


5. Re-installation of the glass package in the permanent window (when the connected windows are installed in the wall).

Connected and installed windows without glass in the permanent window.

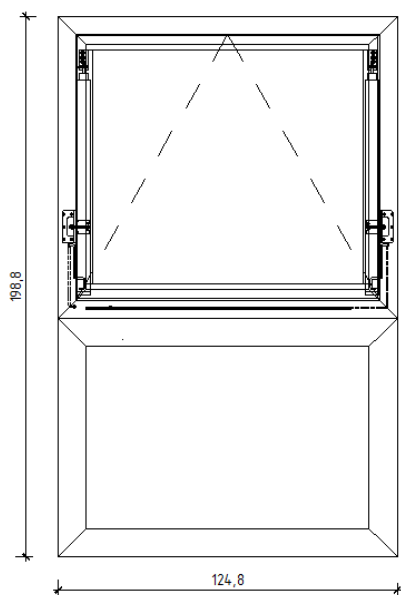

Windows completed.

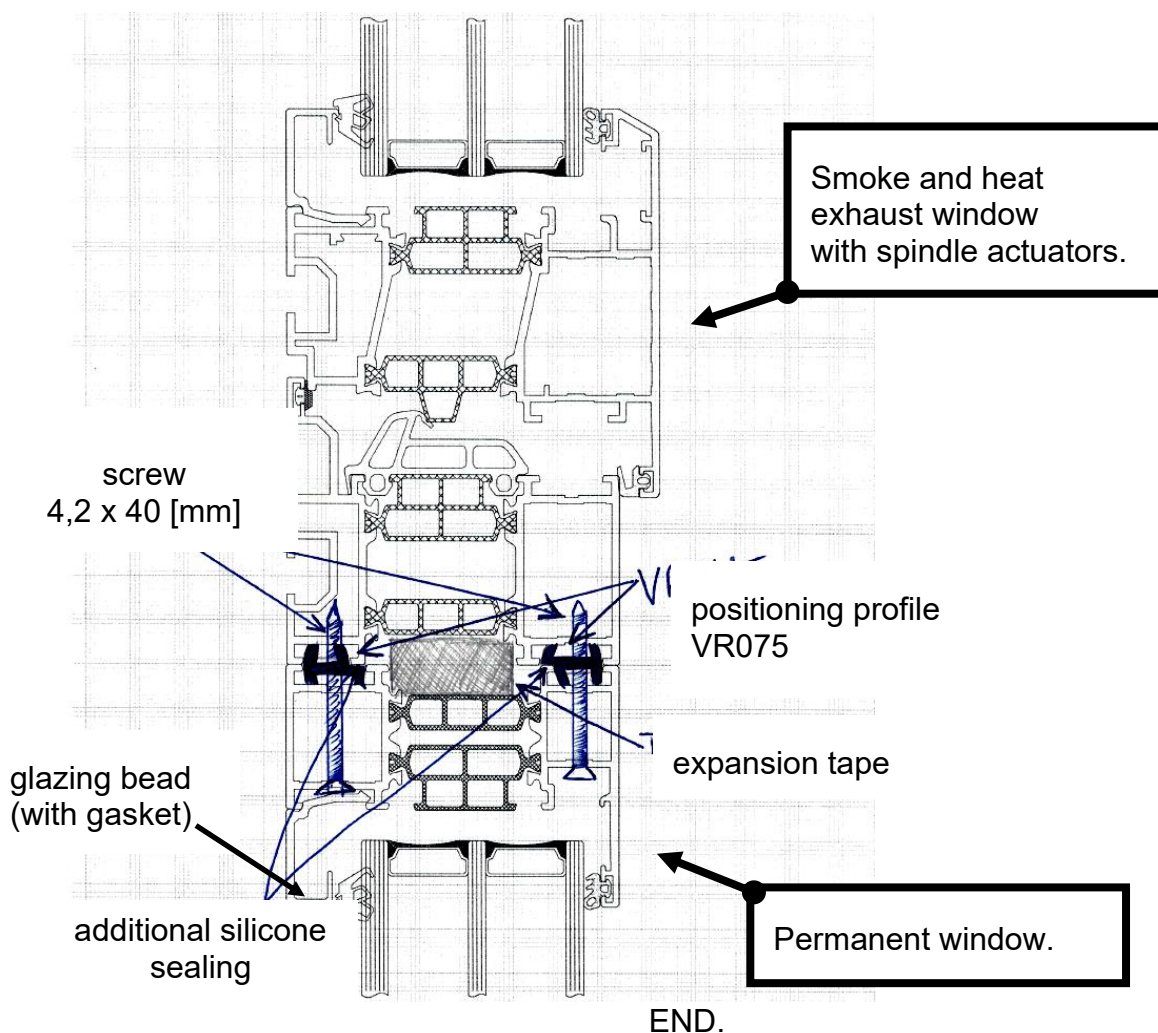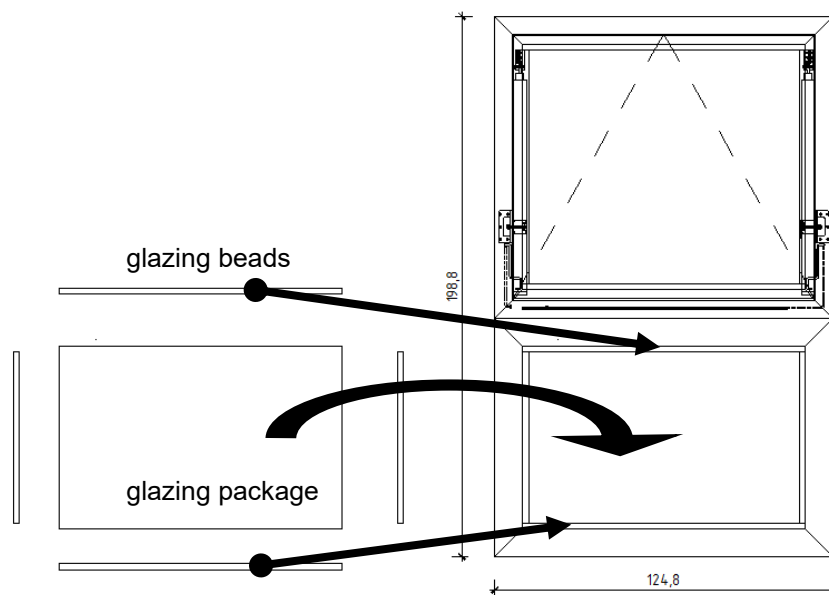

END.