


mcr OSO THERM. Szczegółowa instrukcja demontażu szyby/Detailed manual for the removal of the glazing

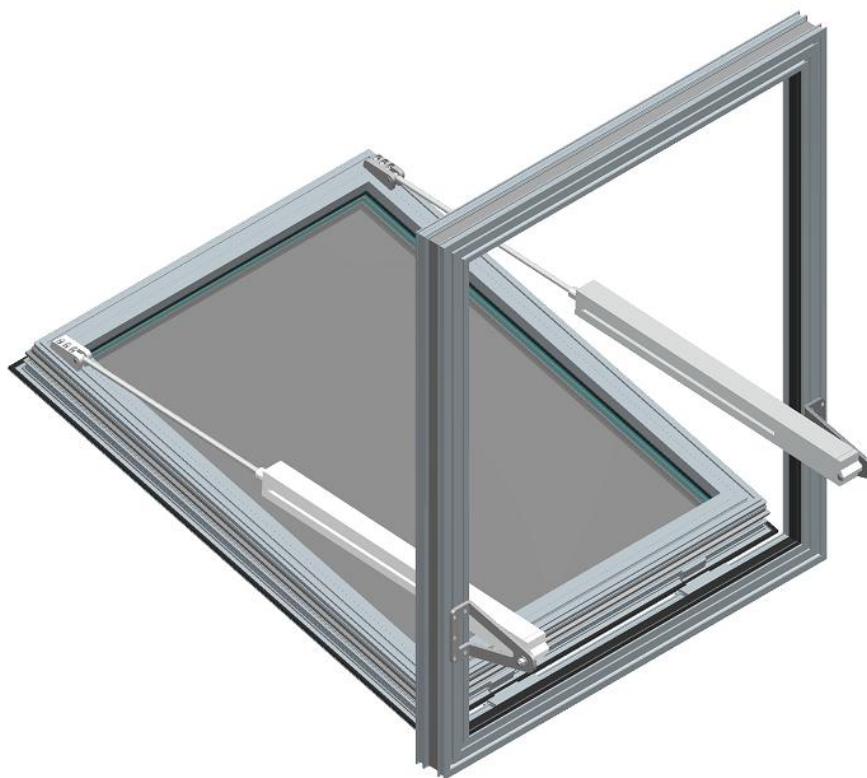

Disassembly of the glazing



Note: this instruction shows the example of window with chain driveas and with opaque glazing.

0. Disassembly must be done from the inside of the window.


1. Pull out gaskets.



2. Pull out glazing beads.

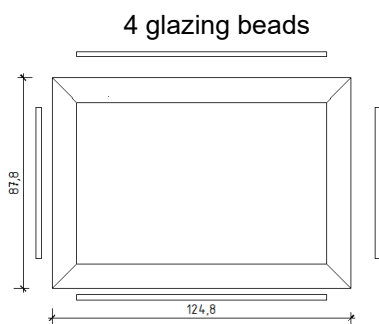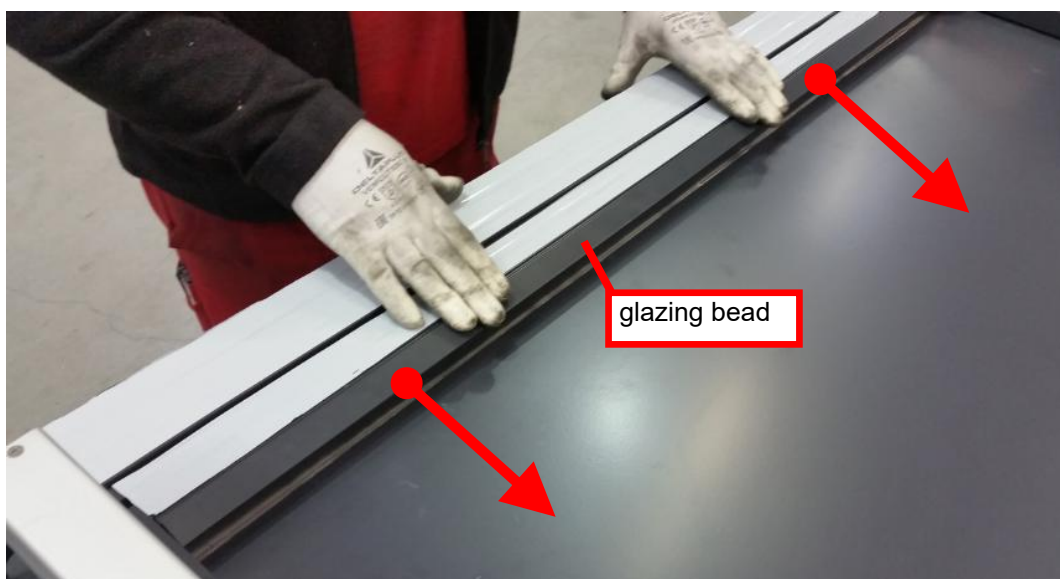


3. Pull out the glazing using special glazing handles.

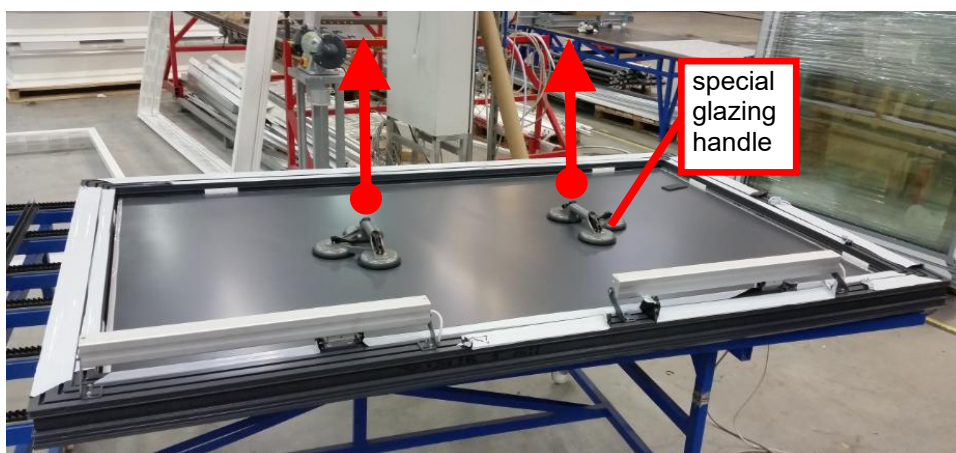

Window without glazing.



!!! Note: Remember positions of glazing supports shown below. They must be inserted again in the same places during reinstallation of the glazing.

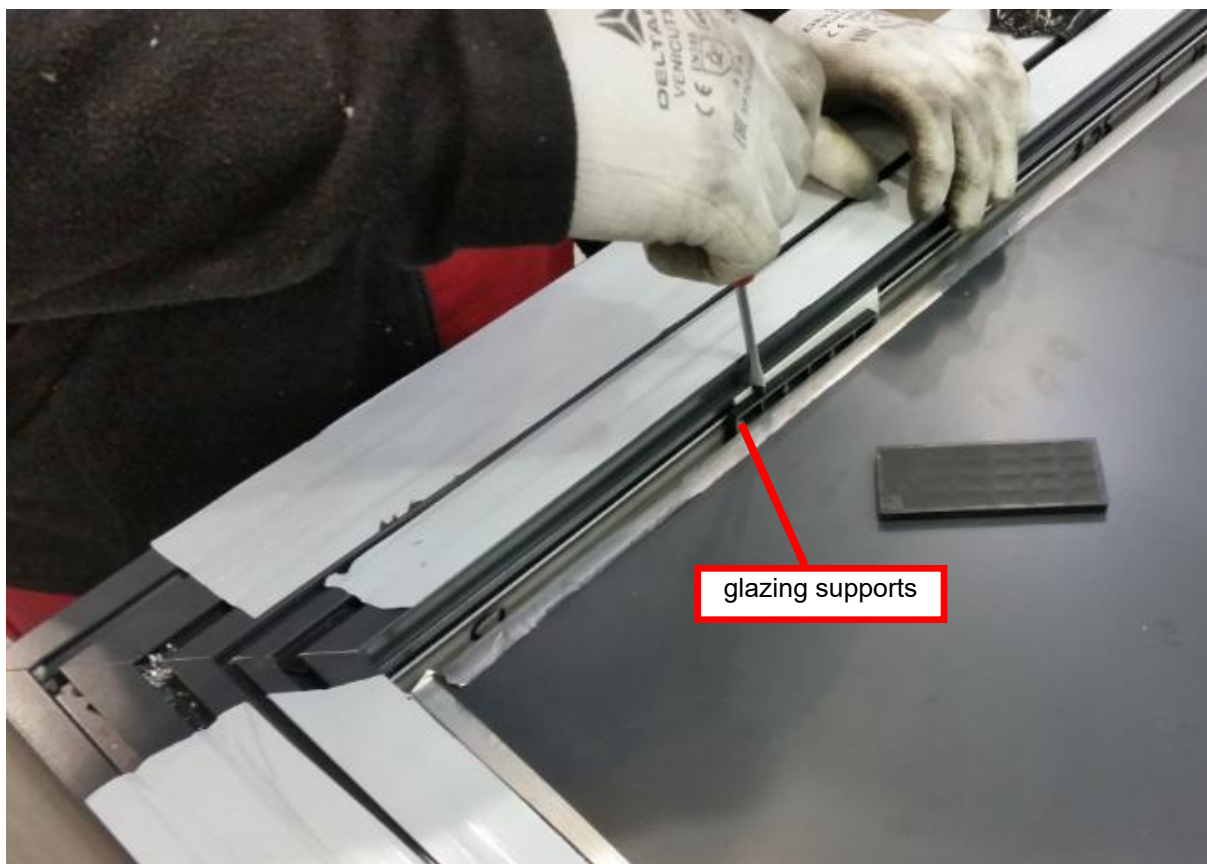

Reinstallation of the glazing

1. Install the glazing using special glazing handles.



2. Install supports in their previous places.



3. Install glazing beads.



4. Install gaskets between glazing beads and the glazing.



Ready:



END.